Therometer Box: Rear Panel

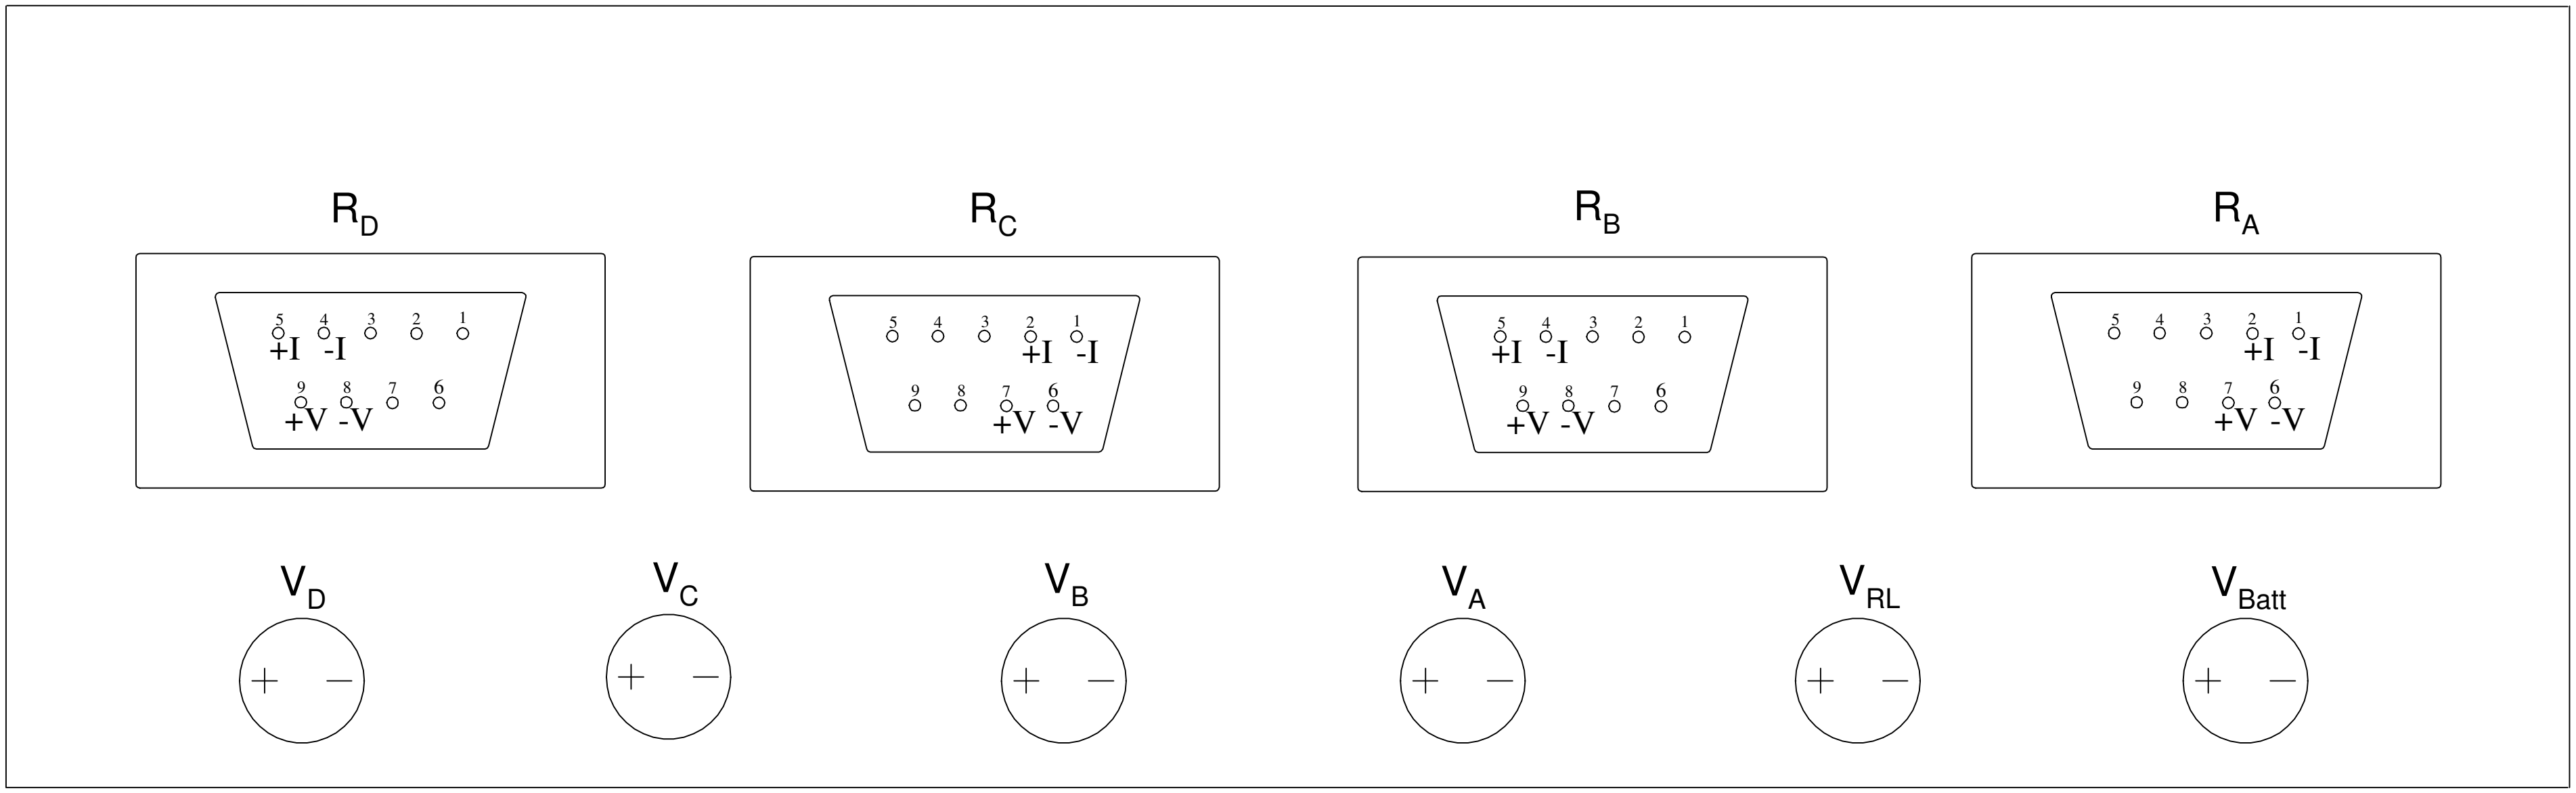

Cables for the resistors		Connected	Backup Connection
Cable for resistor A	I_A-	pin 1	pin 4
	I_A+	pin 2	pin 5
	V_A-	pin 6	pin 8
	V_A+	pin 7	pin 9
Cable for resistor B	I_B-	pin 4	pin 1
	I_B+	pin 5	pin 2
	V_B-	pin 8	pin 6
	V_B+	pin 9	pin 7

Cables for the resistors		Connected	Backup Connection
Cable for resistor C	I_C-	pin 1	pin 4
	I_C+	pin 2	pin 5
	V_C-	pin 6	pin 8
	V_C+	pin 7	pin 9
Cable for resistor D	I_D-	pin 4	pin 1
	I_D+	pin 5	pin 2
	V_D-	pin 8	pin 6
	V_D+	pin 9	pin 7

Cable measuring Voltage of the Battery, Load Resistor, R_A, R_B, R_C, R_D

MALE half of Twin Ax connector is positive

FEMALE half of Twin Ax connector is negitive

M. C. Herda
Univ of Md
May 28, 2000